

• **B & K**

ON
B&K

IN 1

IN 2

IN 3

IN 4

IN 5

IN 6

IN 7

POWER
ON/OFF

MUTE

OFF

VOLUME

PRESET

SAVE

MENU

EXIT

ZONE

1

2

3

IN 8

4

5

6

IN 9

7

8

9

D-IN

+10

0

ENTER

LOUD

DEDICATED

LOUDNESS

AM

M

T+

B+

S+

ST/M

TREBLE

BASS

SOURCE

FM

V+

T-

B-

S-

VIDEO +

TUNE-

TUNE+

STA-

STA+

B & K Components, Ltd.
Model MZ-128

- 1) The MZ-128 Remote Controller may be used to control and setup a CT610/310/600.
- 2) The MZ-128 may be used as a source of IR for use in programming learning keypads etc...
- 3) The MZ-128 may be set to source the B & K IR functions listed below, for code sets 000-128 and 999.

- 1) Install 4 AAA batteries into the remote. Observe polarity.
- 2) Press and hold the B & K and MUTE buttons simultaneously for two seconds. The LED will light up solid red and stay illuminated.
- 3) Firmly press the desired B & K three digit code set. Always use three digits (i.e. 0-1-1 default for Zone A)
- 4) Press the B & K button again to confirm setup. The red LED will blink three times when the IR

Code-Set 128 Simply Explained

Code-Set 128 is a special code-set which allows individual control of the Hardware Zone that the IR Data is received by. It will not function when received by the unit's front panel. I.e., Two keypads are plugged into Zone A & B's Control I/O Ports, when the remote comes into IR view of the keypad in Zone A, the 128 Code-set remote will only control Zone A, when in Zone A. Take that same remote into Zone B and it will only control Zone B.